

Positive Grid Spark Settings Cheat Sheet

Spark 40 and Spark 2. Knobs 0 to 10, 5 at noon.

GAIN	BASS	MID	TREBLE	REVERB
Clean BLACK DUO OR SILVER 120				
 2 to 3	 5	 5	 6	 about 3
Blues LUX VERB OR BLUES BOY				
 3 to 4	 5	 6 to 7	 5 to 6	 about 3
Classic rock PLEXIGLAS OR JM45				
 5 to 6	 5	 6 to 7	 6	 about 2
Metal INSANE, TREADPLATE OR INSANE 6508				
 6 to 7	 4 to 5	 5	 6 to 7	 1 or off

- MODEL** Pick the amp model first: Amp Type on a 40, the app on a 2.
- GATE** For metal, switch on the Noise Gate in the Spark app.
- SOLO** Add Delay rather than more Gain. Tap sets the delay time.
- FIZZY** Lower Gain first, then Treble.
- THIN** Raise Mid before you raise Gain.
- SAVE** Long-press the preset's button. A flashing red light means unsaved.